


BRONZE LINE - LET QUICK-START GUIDE

PLEASE NOTE: For complete instructions refer to manual.

MANUAL BACKWASH

Note: If you need to initiate a manual backwash, either immediately, or tonight at the preprogrammed time (typically 2 a.m.), complete the following steps.

Arrow will point to Regen if a regeneration is expected "Tonight."

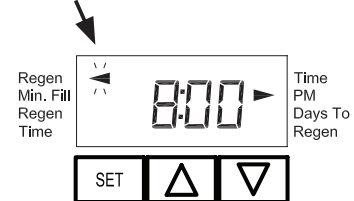


For Immediate Backwash:

Press and hold ▲ and ▼ simultaneously until valve motor starts (typically 3 seconds).

For Regeneration Tonight:


Press and release ▲ and ▼ simultaneously (notice that arrow points to Regen).

If the display shows "E1," "E2," "E3", or "E4" (for error), call a service technician.

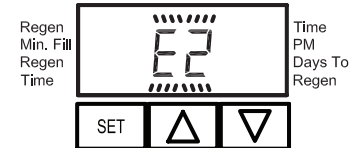


To **shut off water** to the system, please position arrow handles as shown in the **bypass operation** diagram below. If your valve doesn't look like the diagram below, contact your service technician for instructions on how to shut off water.

NORMAL OPERATION

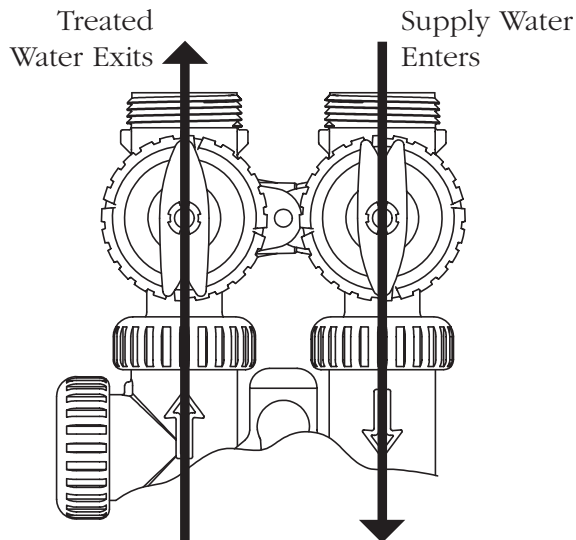


BYPASS OPERATION

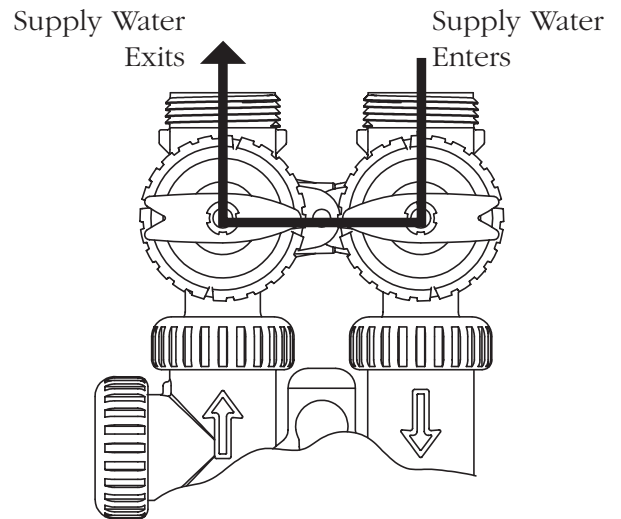


GENERAL OPERATION

When the system is operating one of two displays will be shown: time of day or days until the next regeneration. Pressing ▲ or ▼ button will toggle between the two choices.

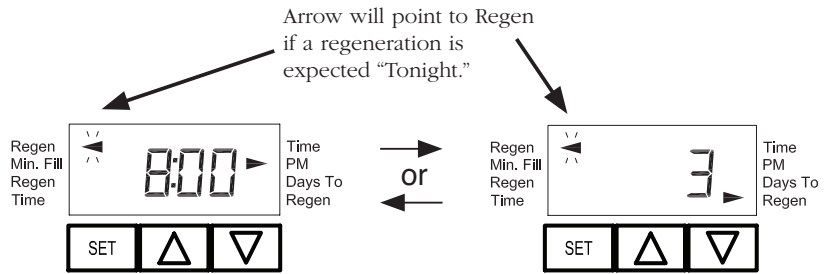

TO SET TIME OF DAY


In the event of a prolonged power outage, time of day flashes, indicating that it needs to be reset. All other information will be stored in memory no matter how long the power outage. Please complete the steps as shown to the right. To access this mode, press "SET."

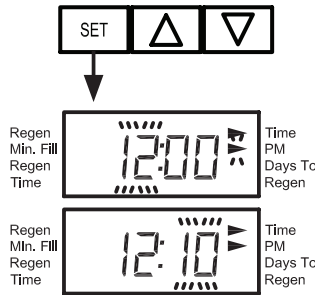

1. Accessed by pressing SET for approximately 3 seconds.
2. Adjust hour with ▲ or ▼. With 60 Hz line frequency detection on power-up, timekeeping is 12 hour with PM indicator. With 50 Hz line frequency detection on power-up, timekeeping is 24 hour without the PM indicator. Press SET to go to the next step.
3. Adjust minutes with ▲ or ▼.
4. Press SET to complete and return to normal operation.

TO SET TIME OF REGENERATION AND DAYS BETWEEN REGENERATION

For initial set-up or to make adjustments, please complete the steps as shown. Access this mode by pressing SET and ▲ for approximately 3 seconds. The number of days between regenerations may need to be varied based on usage and water conditions. (This step will not appear if the 7-day clock option is selected.)

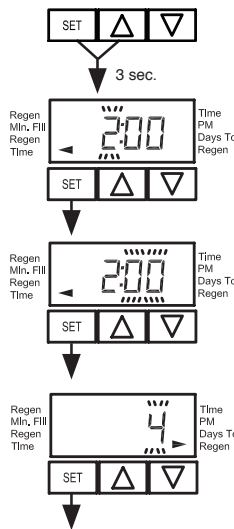

1. Accessed by pressing SET and ▲ simultaneously for about 3 seconds.
2. Set Regeneration Time Hour. Set the time for regeneration to start. Press SET to go to the next step.
3. Set Regeneration Time Minutes. Press SET to go to the next step.
4. Set number of Days between regeneration cycles.
5. Press SET to complete and return to normal operation.

NOTES:

Model number: _____

Installation date: _____

Installer name: _____

Installer phone number: _____

Water Pressure: _____

Hardness (gpg): _____

Iron (ppm): _____

pH: _____

Other: _____

LANCASTER
WATER TREATMENT

A DIVISION OF C-B TOOL CO.

1340 MANHEIM PIKE • LANCASTER PA 17601-3196 • TEL: 717-397-3521 • FAX: 717-392-0266

www.lancasterwatertreatment.com • E-mail: info@lancasterpump.com